


USER MANUAL

MK-17S26C2

6207 / 6206 / 6208 / 6209

Electric Jug Kettle

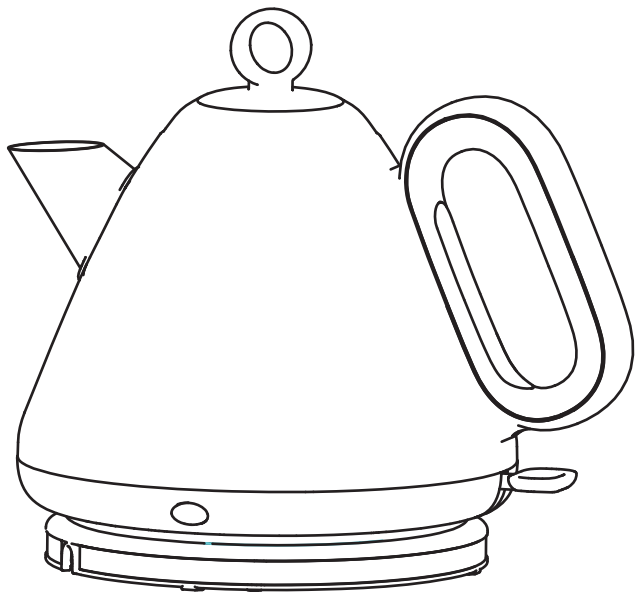

Please read the manual carefully before operating your product.
Retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- 1、 Read carefully and save all the instructions.
- 2、 For additional protection, we recommend the use of a power outlet with a rated current of 13A. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- 3 Do not fill kettle when positioned on base,Dry the water on the bottom of the body before place it onto power base.
- 4、 Never leave the appliance unattended when in use.
- 5 Close supervision is necessary when your appliance is being used near children or infirm persons.
- 6 Electric kettle must be operated on a flat surface. Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances
- 7、 Do not touch hot surfaces, use the handle. Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
- 8、 Do not use the kettle to heat anything other than water. Do not fill above the "max" indication. Do not operate kettle if water is below minimum.
- 9、 Do not let the power cord hang over the edge of the table or touch hot surfaces. Always store excess portion of the power cord in the compartment of the base unit.
- 10、 Do not immerse any part of the appliance in water or other liquid. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person. Always use your appliance from a power outlet of the voltage(A.C. only)marked on the appliance.

- 11、 If the power cord is damaged, it must be changed by manufacturer or authorized persons.

NOTE: If the kettle is overfilled,boiling water may be ejected.
The kettle is only to be used with the stand provided.

- 12、 Always unplug from the plug socket when in following conditions:

No water in kettle Filling water Not in use Before cleaning or moving kettle.

- 13、 Call our free customer assistance number for information or return to Midea Customer Service Department for examination and repair.Never repair the appliance by yourself.

WARNING:To reduce the risk of fire or electric shock , do not remove the bottom cover of the body or the power base by yourself.

- 14、 Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the manufacturer may result in fire electrical shock or personal injury.

- 15 Do not insert any object into slots or holes of the kettle.

- 16、 This appliance is for household use only.Do not use outdoors.

- 17、 This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- 18、 Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and
- 19、 its cord out of reach of children aged less than 8 years.

- 20、 Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

21. Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

Only the appropriate connector must be used.

22. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Please follow the above safety precautions

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard



Disposal of appliances and batteries

After the implementation of the European Directive **2012/19/EU** in the national legal system, the following applies:

Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

BRIEF INTRODUCTION

Rational design,

bring convenience and enjoyment to your life

- Rapid boiling , save time and energy for you
- Steam control to switch the kettle off after boiling.
- Automatically cut off for dry boil protection.
- Easy read water gauge.
- Thermostat of high quality.

NAMES OF MAIN PARTS

1. Lid

2. Spout

3. Switch

4. Handle

5. Water gauge

6. Power base



Kettle model

Model No.	Rated voltage	Rated power	Capacity	Dimensions	Weight
MK-17S26C2	220-240V~50/60Hz	1850-2200W	1.7L	275*210*236mm	1.3 kg

HOW TO USE

For the first time to use or no use for a long time, it is recommended that you fill to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear kettle of any tiny particles. Do not drink such water.

- 1、 Press the lid release button, and the lid can open automatically.
- 2、 Remove the kettle from the base to the filling place. Fill the kettle with desired amount (no less than the minimum and no more than the maximum.) Put back the lid; place the kettle back on the base unit.
- 3、 Connect the plug into a power outlet (220-240V ,AC), switch the kettle on by pressing the switch. The light will illuminate to indicate the kettle is heating.
- 4、 The kettle will automatically switch off once the water has boiled and the neon light goes off.
- 5、 Lift the kettle from the base, and you can pour out the water into container.

CLEANING

- ▶ To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.
- ▶ Always unplug from the plug socket and allow to cool down before cleaning.
- ▶ Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

Cleaning methods:

- 1、 Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours;
- 2、 Empty the solution from the kettle. Wipe off the deposits remained with damp cloth;
- 3、 Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use;
- 4、 If necessary, repeat the operations above for several times;
- 5、 The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth;
- 6、 Grasp the top of the scale filter and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.



תעודת אחריות

לקומקום חשמלי דגם MK-17S26C2

מכשיר זה נבדק בקפדנות לפני שיווקו לצרכן. לפיכך אנו נותנים אחריות למוצר זה לתקופה של 36 חודשים מתאריך הקנייה בכפוף לתנאים הבאים: אחריות זו בתוקף רק בצירוף חשבונית הקנייה. האחריות לא תחול במקרים הבאים: שימוש בלתי נאות, שבר מכל סיבה שהיא, או במקרה של תיקון שלא באמצעות אחת מתחנות השירות המוסמכות על ידינו והמפורטות בגוף תעודת האחריות. האחריות אינה כוללת: פח, צבע, חלקי פלסטיק או זכוכית של המכשיר, חלקי גומי, כבל חשמלי ותקע.

שם הקונה: _____

כתובת: _____

חותמת החנות: _____

תאריך רכישה: _____

לפניכם רשימת תחנות השירות באזורים השונים:

עיר	שם	כתובת	טלפון
מודיעין	המילטון	האופה 8 ישפרו סנטר	08-6852100
תל אביב	דני תיקונים	סלמה 94	03-6820995
ירושלים	שרות ברקת	אגריפס 43	02-5382922
חיפה	שרות רם	רח' ביאליק 9	077-4002512
נתניה	בר מנחם	רמז 15	09-8337733
אשקלון	שרות איציק	העבודה 31 פינת הנוטרים	08-6758914
באר שבע	מיקרו מיקס	החלוץ 102	08-6232717
אשדוד	המרכז לתיקוני חשמל	מרכז מסחרי א'	08-8533976
ראשל"צ	אלקטרו בוגדרי	יהודה לייב 4 (פינסקר)	03-9666492
חולון	דני תיקונים	שנקר 29	03-5011055
אילת	דרורי אלקטרוניקה	א.ת. אילת	08-6317204
טבריה	תיקון כל טיבי	יוחנן בן זכאי 3	04-6790469
בני ברק	וירטואל חשמל	רבי עקיבא 65	03-6542000
עפולה	שירות רם	הולנד 7	04-9531444

סוג המכשיר: קומקום חשמלי דגם MK-17S26C2

לשלוח בדואר מייד

שם הקונה: _____

Email: _____

כתובת: _____

תאריך רכישה: _____

כתובת וחותמת המוכר

ספח זה משמש העתק של התעודה בידי מעבדת השרות. בלי המצאו של העתק זה בידי הטכנאי לא יהיה לתעודה זו כל תוקף.

ניקיון

- להארכת חיי השירות של הקומקום, נא לנקות את המשקעים המינרליים (האבנית) בקומקום באופן קבוע.
- נתקו תמיד את התקע מהשקע שבקיר ואפשרו לקומקום להתקרר לפני הניקוי.
- אין להשתמש בחומרי ניקוי כימיים, צמר פלדה או חומרים שורטים לניקוי החלק החיצוני של הקומקום, מכיוון שאלה ישרטו את פני השטח ויפגמו בצבע החיצוני.

שיטות הניקוי

1. מלאו את הקומקום ב-0.5 ליטר חומץ לבן ואת השאר במים ואפשרו להם לעמוד במשך למעלה מ-1 שעה;
2. רוקנו את התמיסה מהקומקום. נגבו את המשקעים שנותרו בעזרת מטלית לחה.
3. מלאו את הקומקום במים נקיים, הביאו לרתיחה ולאחר מכן שפכו את המים. חזרו על הפעולה והקומקום יהיה מוכן לשימוש.
4. אם צריך, חזרו על הפעולות שלעיל במשך מספר פעמים.
5. אין לטבול את הקומקום במים. את פני השטח של הקומקום אפשר לנגב במטלית לחה ולהבריק עם מטלית רכה ויבשה.
6. אחזו בחלק העליון של פילטר האבנית ומשכו כלפי מעלה להוצאתו. רחצו במים נקיים וייבשו ביסודיות לפני החזרתו לתוך הקומקום.

שמות החלקים העיקריים

- | | | |
|---------|------------|---------------|
| 1. מכסה | 2. זרבובית | 3. מתג |
| 4. ידית | 5. מד מים | 6. בסיס חשמלי |



מפרט טכני

מס' דגם	מתח חשמלי	הספק	קיבולת	מידות	משקל
MK-17S26C2	220-240V ~ 50/60Hz	W1850-2200	1.7 ליטר	236*210*275 מ"מ	1.3 ק"ג

אופן השימוש

בפעם הראשונה בה משתמשים בקומקום, או לאחר שלא נעשה בו שימוש במשך זמן רב, מומלץ למלא עד לסימן גובה המקסימום במי ברז טריים, להרתיח ולרוקן את הקומקום לפחות חמש (5) פעמים כדי לנקות את הקומקום מחלקיקים זעירים. אין לשתות מים אלה.

1. לחצו על לחצן שחרור המכסה, והמכסה ייפתח באופן אוטומטי.
2. הסירו את הקומקום מהבסיס שלו והעבירו למקום המילוי. מלאו את הקומקום בכמות הרצויה (לא פחות מהמינימום ולא יותר מהמקסימום). החזירו את המכסה; הניחו את הקומקום חזרה על בסיס המכשיר.
3. חברו את התקע לתוך שקע החשמל (240-220V, AC), הפעילו את הקומקום על ידי לחיצה על המתג. האור יידלק ויציין שהקומקום מתחמם.
4. הקומקום ייכבה באופן אוטומטי לאחר שהמים רתחו ואור הניאון נכבה.
5. הרימו את הקומקום מבסיסו, ותוכלו למזוג את המים החוצה.

24. יש להשתמש אך ורק בתקע מתאים.

25. מכשיר זה מיועד לשימוש ביישומים ביתיים וביישומים דומים כגון:

- מטבחי צוות במקומות כמו חנויות, משרדים וסביבות עבודה אחרות;
- משקים חקלאיים;
- על ידי לקוחות בבתי מלון, מוטלים וסביבות מגורים אחרות.
- בצימרים.

מכשיר זה אינו מיועד לשימוש על ידי אנשים (כולל ילדים) עם יכולות פיזיות, תחושתיות או שכלית מופחתות, או חסרי ניסיון וידע, אלא אם כן הם תחת פיקוח או שקיבלו הנחיות לשימוש במכשיר ע"י אדם האחראי לבטיחותם.

ילדים צריכים להיות תחת השגחה כדי להבטיח שהם לא משחקים עם המכשיר.

אם כבל הזינה ניזוק, חייבים להחליפו על ידי היצרן, תחנת השירות שלו או אנשים שהוכשרו לכך למניעת סכנה.

אזהרה: מנעו דליפת נוזלים על המחבר.

אזהרה: משטח גוף החימום נתון לחום שיורי לאחר השימוש.

אזהרה! אין להסיר את המכסה בזמן שהמים רותחים.

זהירות! הצב את המכסה כך שהאדים יפנו הרחק מהידית.

הגנת הסביבה



אין להשליך מכשיר זה לפח האשפה הביתי בסוף השימוש בו אלא להיפטר ממנו מנקודת איסוף מרכזית למחזור מכשירים חשמליים ואלקטרוניים. סמל זה המופיע על המכשיר, על חוברת ההוראות ועל האריזה מפנה את תשומת ליבכם לנושא חשוב זה. את החומרים שבהם השתמשו במכשיר זה ניתן למחזר. על ידי מחזור מכשירים ביתיים משומשים אתם מעניקים דחיפה חשובה להגנת הסביבה שלנו. בררו ברשות המקומית למידע ביחס לנקודת האיסוף הקרובה למקם מגוריהם.

נא להקפיד על מילוי הוראות הבטיחות

מבוא קצר

עיצוב ייחודי המביא נוחיות והנאה לחיך


- רתיחה מהירה, חיסכון בזמן ובאנרגיה
- בקרת אדים לכיבוי הקומקום לאחר הרתיחה
- ניתוק אוטומטי להגנה מפני רתיחה יבשה
- מד מים ברור וקריא
- תרמוסטט באיכות גבוהה.

הוראות בטיחות חשובות

1. קראו בקפידה ושמרו את כל ההוראות.
2. להגנה נוספת, אנו ממליצים על שימוש בשקע חשמלי עם זרם בדרג 10A. למניעת עומס יתר על המעגל החשמלי, אין להפעיל מכשיר נוסף בעל מתח חשמלי גבוה על אותו מעגל.
3. אין למלא את הקומקום כשהוא נמצא על הבסיס. יש לייבש את המים בתחתית הגוף לפני הנחתו על הבסיס.
4. יש להשתמש בקומקום רק עם הבסיס המסופק.
5. לעולם אין להשאיר את המכשיר ללא השגחה כשהוא בשימוש.
6. יש צורך בהשגחה צמודה כאשר נעשה שימוש במכשיר ליד ילדים או אנשים לא כשירים.
7. חובה להפעיל את הקומקום החשמלי על משטח שטוח. אין להניח מכשיר זה על או ליד כיריים חמים או מבער חשמלי או על מכשירים חשמליים אחרים.
8. אין לגעת במשטחים חמים, יש להשתמש בידית. יש להיות מודעים לאדים הנפלטות מהזרבובית או מהמכסה, במיוחד בעת מילוי חוזר. אין להסיר את המכסה במהלך הרתיחה.
9. אין להשתמש בקומקום לחימום שום דבר אחר חוץ ממים. אין למלא מעל לסימן ה-MAX. אין להפעיל את הקומקום אם המים הם מתחת לגובה המינימום.
10. אין להניח לכבל החשמל לתלות על פני קצה השולחן או לגעת במשטחים חמים. יש לאחסן תמיד את עודף הכבל החשמלי בתא האחסון בתחתית הבסיס.
11. אין לטבול שום חלק של המכשיר במים או בנוזל אחר. אין להשתמש במכשיר עם כבל מאריך אלא אם כן כבל זה נבדק ונבחן על ידי טכנאי מוסמך או איש שירות. השתמשו תמיד במכשיר מתוך שקע חשמלי בהספק המסומן על המכשיר.
12. אם כבל הזינה ניזוק, חייבים להחליפו על ידי היצרן או אנשים מורשים מטעמו, למניעת סכנה.
13. אם ממלאים את הקומקום מעל המפלס המותר, קיימת סכנה להתפרצות מים רותחים.
14. יד לנתק תמיד את הקומקום מהשקע במצבים הבאים: אם אין מים בקומקום, לפני ניקוי או הזזת הקומקום.
15. יש להתקשר לשירות הלקוחות לקבלת מידע או להחזרת הקומקום לתחנת השירות לשם בדיקה ותיקון. אין לתקן את המכשיר בעצמכם.
- אזהרה: למניעת סכנה של הלם חשמלי, אין להסיר את הכיסוי של החלק התחתון של הגוף או של הבסיס החשמלי בעצמכם.
16. אין להשתמש ביחידת הבסיס למטרה אחרת חוץ מזו שלשמה סופקה. השימוש באביזרים נלווים שאינם מומלצים על ידי היצרן עלול לגרום לשריפה, הלם חשמלי או פציעה.
17. אין להכניס חפצים כלשהם לתוך חריצים או חורים בקומקום.
18. מכשיר זה הינו לשימוש ביתי בלבד. אין להשתמש בו מחוץ לבית.
19. מכשיר זה ניתן לשימוש על ידי ילדים מגיל 8 שנים ומעלה אם הם קיבלו השגחה או הדרכה בנוגע לשימוש במכשיר בדרך בטוחה ואם הם מבינים את הסכנות הכרוכות בכך.
20. ניקיון ותחזוקה לא ייעשו על ידי ילדים אלא אם כן הם מבוגרים יותר מגיל 8 ונמצאים תחת השגחה. שמרו את המכשיר ואת הכבל שלו מחוץ להישג ידם של ילדים בני פחות מ-8 שנים.
21. במכשיר יכולים להשתמש אנשים עם יכולת גופנית, תחושתית או שכלית ירודה או החסרים ניסיון וידע אם הם קיבלו השגחה או הדרכה בנוגע לשימוש במכשיר בדרך בטוחה ומבינים את הסכנות הכרוכות בכך.
22. אין להרשות לילדים לשחק עם המכשיר.
23. אם פתיל הזינה ניזוק, כדי למנוע סיכון, יש להחליף בפתיל מיוחד או מערכת המסופקים ע"י היצרן או נציגו.



הוראות שימוש
לקומקום חשמלי
דגם: MK-17S26C2
מק"ט: 6209 / 6208 / 6207 / 6206

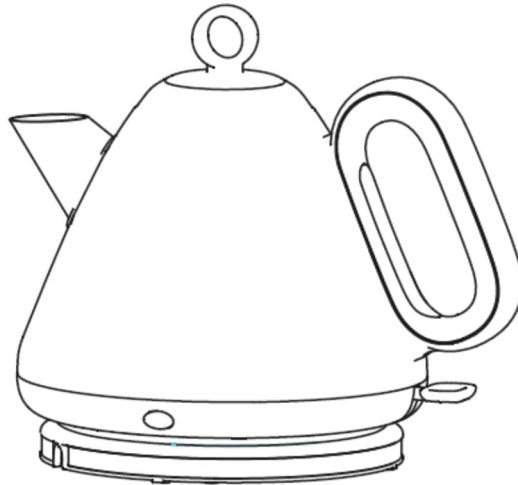

קראו את הוראות ההפעלה בעיון לפני ההתקנה וההפעלה של המכשיר. שמרו על הוראות ההפעלה לעיון בעתיד.

מוצרינו נועדו לשימוש ביתי בלבד.
היצרן אינו אחראי לכל נזק לגוף ולרכוש שייגרם עקב התקנה לא נכונה ושימוש בלתי תקני.
היצרן לא ישא באחריות לכל אי דיוקים בחוברת זו הנובעים משגיאות דפוס וכתוב. האיורים בחוברת משמשים לצורך המחשה בלבד.
היצרן שומר לעצמו את הזכות להכניס שינויים ושיפורים במוצר בהתאם לצורך ולטובת המשתמש, מבלי לפגוע בתכונות הבטיחות ובביצועי המוצר.

יבוא ושרות: המילטון בע"מ